

Weld Air

OPERATION & SAFETY

SWA-100



Innovatech Manufacturing
4360 N WECCO Rd
Cedar City, UT 84721
<https://innova.tech>

SWA-100

SWA100-MNL01-R00

Document Information

Revision Log

Produced by: InnovaTech Manufacturing
Product: Weld Air Machine Operation and Safety Manual
Manual Product Code: SWA100-MNL01-R00
Version: Version 1
Production Date: July 14, 2023

This Manual

This manual is intended as a basic source of information on the safe operation and maintenance of InnovaTech Manufacturing's Weld Air. This manual provides general information as well as specific warnings, instructions, and information that workers using this machine must read, understand, and follow.

This manual is not intended as an all-encompassing "rule-book" on operation safety. Instead, InnovaTech Manufacturing presents this information as a reference and guide only. It is the purchaser's and operator's responsibility to identify specific safety hazards and determine proper procedures to prevent those hazards from inflicting injury.

Safety is paramount in the operation of this machine. A copy of this manual should be made available to all persons using this machine. This manual is available online at <https://innova.tech>.

All information in this manual is based on the latest product information at the time of publication. However, there may be design improvements from time to time so that photographs, text, and sketches within the body of this manual may not exactly match your machine. InnovaTech Manufacturing's responsibility, financial or otherwise, for any consequences arising out of the use of this manual or its machine is limited by our product warranty. The information contained herein is subject to change, and revisions may be issued to advise of such changes. InnovaTech reserves the right to make product changes at any time without obligation.

This manual contains subject matter to which InnovaTech Manufacturing has proprietary rights. Recipients of this document shall not duplicate, use, or disclose information contained herein, in whole or in part, for any use other than for machine operator use and for training personnel on safe operation and maintenance of this machine.

If you have any questions or concerns about the content of the WeldAir Use and Safety Manual or, if you would like to request updated information, we want to hear from you.

Please contact us:

<https://innova.tech>

support@innova.tech

INNOVATECH MANUFACTURING
TECHNICAL PUBLICATIONS
4360 N WECCO RD
CEDAR CITY, UT, USA 84721

The InnovaTech Weld Air is protected under US PATENT PENDING

©2023 InnovaTech Manufacturing. All Rights Reserved.

Table of Contents

| | |
|--------------------------------|----|
| Document Information | II |
| Revision Log | II |
| This Manual | II |
| 1. Safety | 2 |
| 1.1 General | 2 |
| Safety Alerts..... | 2 |
| 1.2 Safety Considerations..... | 2 |
| A. Labels and Decals | 2 |
| 2. Overview | 3 |
| 2.1 General | 3 |
| 3. Operation..... | 3 |
| 3.1 General | 3 |
| 4. Specifications | 4 |
| General..... | 4 |
| Dimensions..... | 4 |
| Weight | 4 |
| Capacity..... | 4 |
| Functions | 4 |
| Welder | 4 |
| Air Compressor..... | 4 |
| 5. Maintenance | 4 |
| 5.1 General | 4 |
| 5.2 Maintenance | 4 |
| 5.3 Modifications | 4 |
| Appendix: | 5 |

Document Information

1. Safety

2. Overview

3. Operation








4. Specifications

5. Maintenance

Appendix

1. Safety

1.1 Safety Alerts

| Hazard Level | Signal Word | Signal Color | Signal Symbol | Signal Example | Signal Meaning |
|--------------|-------------|--------------|---|--|---|
| Extreme | DANGER | RED |  |  | DANGER indicates a hazardous situation which, if not avoided, WILL result in death or serious injury. |
| High | WARNING | ORANGE |  |  | WARNING indicates a hazardous situation which, if not avoided, COULD result in death or serious injury. |
| Medium | CAUTION | YELLOW |  |  | CAUTION indicates a hazardous situation which, if not avoided, MAY result in moderate injury. |
| Low | CAUTION | YELLOW | no symbol |  | CAUTION (without a symbol) indicates a hazard or practice not related to personal injury. |

1.2 Safety Considerations

The Weld-Air contains a welder and has an air compressor that operates at 120 psi. Appropriate precautions should be taken.


Refer to the Lincoln Welder manual and the Oasis Air Compressor manual for specific Safety concerns relating to the welder or the compressor of the Weld-Air.

2. Overview

2.1 General

The Weld-Air (SWA-100) was engineered to make welding from a boom lift more safe and efficient. It is a 2-door steel encasement that houses an air compressor, an air tank, and an inverter welder. The Weld Air is approved for a Snorkel boomlift. It is powered by the batteries and a 20KW generator of the Boom Lift. Cables and hoses can be installed in the boom of the boomlift conveying power and air from the WeldAir to the manbasket. These cables and hoses can be uninstalled and the Weld-Air removed when necessary.

2.2 Nomenclature

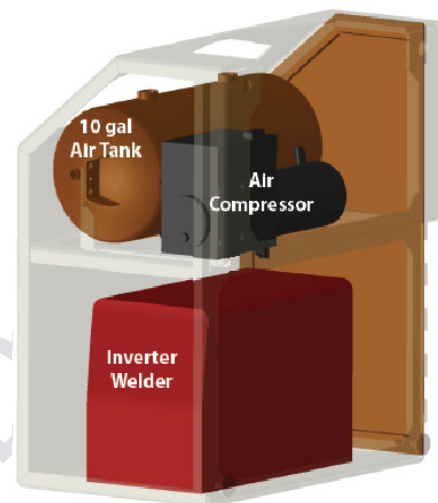

3. Operation

3.1 General

The Weld-Air houses a Lincoln Welder that is intended to be wired to a Boom Lift generator. There are no modifications to the welder. Refer to Lincoln’s operation manual for specific operating instructions.

The Weld Air contains a 12 Volt Oasis air compressor with a 10 gallon air tank. Refer to the Oasis operation manual for specific operating instructions. Air pressure can be set by an adjustable tank mounted

pressure sensor. A rocker switch on top of the Compressor turns it on or off.

3.2 Operating the WeldAir

1. Start the Boom Lift.
2. Open the door and turn on Welder and Air Compressor. Ensure door is tightly latched when closed.
3. Before shutting down Boom Lift, turn off welder and air compressor. Close door tightly.

4. Specifications

General

Dimensions

Length 2 ft. 10 in.
 Width 23 in.
 Height 3 ft. 3 in.

Weight

Weight 480 lbs

Capacity

Air Tank Capacity 10 gallons

Functions

Welder

BrandLincoln
 Model FlexTec-350
 Input Power 1 or 3 phase
 Voltage220-480 Volt
 Power Source20KW Generator

Air Compressor

BrandOasis
 ModelXD4000-12
 Duty Cycle..... 100%
 Voltage 12 Volt
 Amperage 190 amps
 Flow Rate 8 cfm @100psi
 Power SourceBoom Lift Batteries

5. Maintenance

5.1 General

CAUTION **IMPORTANT!** If the WeldAir does not operate properly, turn it off immediately! Tag it “Out of Service.” Report the problem to the proper maintenance personnel. Do not operate the machine until it is safe for operation.

5.2 Maintenance


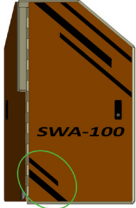



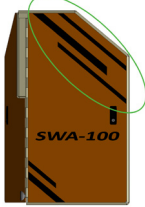

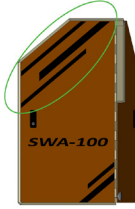
Drain the air tank weekly by pulling the drain valve on the bottom of the tank.

5.3 Modifications

Do not modify the Weld-Air.

Appendix A: Decals and Labels

| Decal and Label Chart | | | |
|-----------------------|-----|---|---|
| Decal ID | Qty | Decal Visual | Decal Application |
| INN-SWA-100-LM01-V01 | 1 |  |  |
| INN-SWA-100-LM02-V01 | 1 |  |  |
| INN-SWA-100-LM03-V01 | 1 |  |  |
| INN-SWA-100-LM03-V01 | 2 |  |  |
| INN-SWA-100-OP02-V01 | 1 |  |  |
| INN-SWA-100-OP01-V01 | 1 |  |  |

| | | | |
|-----------------------|---|--|--|
| INN-SWA-100-DL01-V01 | 1 |  |  |
| INN-SWA-100-DL02-V01 | 1 |  |  |
| INN-SWA-100-DL03-V01 | 1 |  |  |
| IINN-SWA-100-DL04-V01 | 1 |  |  |



Innovatech Manufacturing
4360 N WECCO Rd
Cedar City, UT 84721
<https://support.innova.tech>

